

## DF400

UltraLink processor module with 8/8 relay outputs/inputs. DIN-rail mount

Ultralink I/O modules are used to receive and/or transmit alarm information as part of an integrated security system. Applications include:

-Converting FlexZone sensor alamr collected over the Silver Network to relays or open-collector outputs for input to a 3rd party Secuity Management System.

-Collecting auxiliary sensor alarms with dry-contact inpluts for display with a Management system.

The Ultralink I/O module connects to the SIIver Network via a communication card. Up to 8 Ultralink expansion modules can be attached to one UltraLink module (DF432). Configuring the mods of operation of the relay ouputs, open-collector outputs and dry-contact inputs is done with the UCM software. The UCM can be connected to the Ultralink modules either by a direct USB connector to the I/O processor or by an IP connection via the Network manager Software.



## **Standard Features**

- · Hosts one network communication card
- · Expansion port for up to 8 Ultralink expansion modules
- USB configuration port
- 8 relay outputs
- 8 dry-contact inputs
- Supplies power to connected modules
- Modular system comprised of processor module, relay module, open-collector output module & dry-contact input module

## DF400

UltraLink processor module with 8/8 relay outputs/inputs. DIN-rail mount

## Specifications

General	
Category	FlexZone
Product type	FlexZone Control Unit
Electrical	
Operating voltage	12 to 48 VDC
Physical	
Physical dimensions	160 x 118 mm
Environmental	
Relative humidity	0 to 95%, non condensing

Ordering	Information
Ordening	mormation

Part No.	Description
DF400	ultraLink processor module with 8/8 relay outputs/inputs. DIN-rail mount

